


XBOX MEMORY UNIT

XBOX 메모리 카드

XBOX 記憶匣

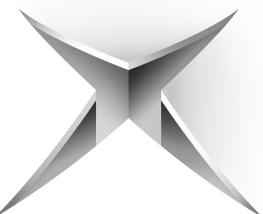

XBOX™



MEMORY UNIT



3

XBOX MEMORY UNIT

MEMORY UNIT

The Xbox Memory Unit provides more than 500 blocks of additional, portable storage space for saved game information. It is for use exclusively with the Xbox™ video game system from Microsoft.

IMPORTANT! Before using this product, read the Xbox Instruction Manual for important safety information and health warnings. **Please retain both the Xbox Instruction Manual and this manual for future reference.** The limited warranty covering this Xbox Memory Unit is contained in the Xbox Instruction Manual.

CONNECTING XBOX MEMORY UNITS

To connect an Xbox Memory Unit, insert the Xbox Memory Unit into either expansion slot on an Xbox Controller or other Xbox peripheral. To disconnect, pull out the Xbox Memory Unit.


Note Do not touch Xbox Memory Unit terminals or the Xbox Controller or peripheral expansion slots with your fingers or allow metal parts to touch them. Doing so may damage the Xbox Memory Unit or the Xbox Controller or peripheral.

PERSONALIZING XBOX MEMORY UNITS

To personalize the Xbox Memory Unit by giving it a name

1. Turn on the Xbox console with no disc in the disc tray.
2. Select **Memory**, then select a specific Xbox Memory Unit.
3. Select **Personalize**, then enter a name for your Xbox Memory Unit.

Once the Xbox Memory Unit is personalized, the user interface will identify your Xbox Memory Unit by its new name.

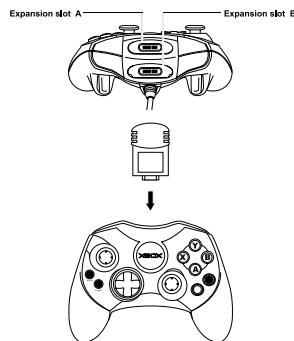



COPYING OR DELETING SAVED GAMES

You can store saved games or other game information on Xbox Memory Units. For information about saving games, see your game manual.

You can copy information from Xbox Memory Units to other connected Xbox Memory Units or to the Xbox hard disk. Also, you can delete saved games to free memory blocks on the Xbox Memory Unit.

To copy or delete saved games

1. Turn on the Xbox console with no disc in the disc tray.
2. Select **Memory**, then select a specific Xbox Memory Unit.
3. Select a specific saved game name.
4. Select **Copy** to move that file to another Xbox Memory Unit or to the Xbox hard disk, or **Delete** to remove the selected game from the Xbox Memory Unit.

IF YOU NEED MORE HELP

Should you have any problems, do not attempt to take apart, service, or modify the Xbox Memory Unit or Xbox console in any way. Doing so could present the risk of serious injury or death from electric shock or fire, and it will void your warranty. Do not take your Xbox video game system or this peripheral to your retailer for repair or service, unless instructed to do so by an Xbox Customer Support representative.

Please see <http://www.xbox.com> or call the Xbox Customer Support number:

- Hong Kong: 800 96 4215
- Singapore: 800 448 1330



5

MEMORY UNIT

Information in this document, including URL and other Internet Web site references, is subject to change without notice. Unless otherwise noted, the example companies, organizations, products, domain names, e-mail addresses, logos, people, places and events depicted herein are fictitious, and no association with any real company, organization, product, domain name, e-mail address, logo, person, place or event is intended or should be inferred. Complying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the express written permission of Microsoft Corporation.

Microsoft may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Microsoft, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.

(c) 2002 Microsoft Corporation. All rights reserved.

Microsoft, Xbox and the Xbox logos are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

The names of actual companies and products mentioned herein may be the trademarks of their respective owners.

Microsoft Corporation, One Microsoft Way, Redmond, WA 98052-6399 USA.



MEMORY UNIT



XBOX 메모리 카드

메모리 카드

Xbox 메모리 카드는 게임 정보 저장을 위한 500블록 이상의 부가적인 휴대용 저장 공간을 제공하며, Microsoft Xbox™ 비디오 게임 시스템 전용입니다.

중요! 이 제품을 사용하기 전에 Xbox 제품 설명서에서 주요 안전 정보와 건강을 위한 주의 사항을 읽어 보십시오. 나중에 참고할 수 있도록 Xbox 제품 설명서와 이 설명서를 잘 보관하십시오. Xbox 메모리 카드에 적용되는 제한된 보증은 Xbox 제품 설명서에 포함되어 있습니다.


Xbox 메모리 카드 연결하기

Xbox 메모리 카드를 연결하려면 Xbox 메모리 카드를 Xbox 컨트롤러 또는 다른 Xbox 주변 장치의 확장 슬롯에 끼웁니다. 분리하려면 Xbox 메모리 카드를 당겨서 빼냅니다.

참고 Xbox 메모리 카드 단자, Xbox 컨트롤러, 또는 주변 장치 확장 슬롯을 만지거나 금속 부품이 달을 경우 Xbox 메모리 카드, Xbox 컨트롤러, 또는 주변 장치가 손상될 수 있으므로 주의하십시오.

Xbox 메모리 카드 이름 입력하기

Xbox 메모리 카드에 이름을 부여하려면 다음 절차를 따르십시오.

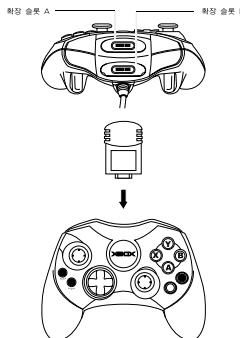

1. 디스크 트레이에 디스크가 없는 상태에서 Xbox 본체를 켭니다.
2. **메모리**를 선택한 다음 해당 Xbox 메모리 카드를 선택합니다.
3. **이름 입력**을 선택한 다음 Xbox 메모리 카드의 이름을 입력합니다.

Xbox 메모리 카드에 이름을 부여하면 사용자 인터페이스에서 새 이름을 통해 사용자의 Xbox 메모리 카드를 식별합니다.



메모리 카드

저장된 게임 복사 또는 삭제하기

저장 게임 또는 다른 게임 정보를 Xbox 메모리 카드에 저장할 수 있습니다. 게임 저장에 대한 자세한 내용은 게임 설명서를 참조하십시오.

Xbox 메모리 카드에서 다른 연결된 Xbox 메모리 카드 또는 Xbox 하드 디스크로 정보를 복사할 수 있습니다. 또한 저장 게임을 삭제하여 Xbox 메모리 카드에 여유 메모리 블록을 확보할 수 있습니다.

저장 게임을 복사 또는 삭제하려면 다음 절차를 따르십시오.

1. 디스크 트레이에 디스크가 없는 상태에서 Xbox 본체를 켭니다.
2. **메모리**를 선택한 다음 해당 Xbox 메모리 카드를 선택합니다.
3. 복사 또는 삭제하고자 하는 게임 이름을 선택합니다.
4. **복사**를 선택하여 해당 파일을 다른 Xbox 메모리 카드 또는 Xbox 하드 디스크로 이동하거나 **삭제**를 선택하여 Xbox 메모리 카드에서 해당 게임을 제거합니다.

도움이 더 필요한 경우

문제가 발생할 경우 Xbox 메모리 카드 또는 Xbox 콘솔을 어떠한 방법으로도 분해, 수리 또는 변경하지 마십시오. 이러한 경우 감전이나 화재로 심각한 부상 또는 사망의 위험이 있으며, 보증을 무효로 만들 수 있습니다. Xbox 고객 지원 담당자가 지시한 경우를 제외하고는 Xbox 비디오 게임 시스템 또는 이 주변 장치를 소매점으로 가져가서 수리하거나 서비스를 받지 마십시오.

<http://www.xbox.com> 사이트를 참조하거나 Xbox 고객 지원 센터에 문의하십시오.

- 대한민국: 00368 440 0090(수신자 부담)



¶

메모리 카드

URL 및 다른 인터넷 웹 사이트 참조를 포함한 이 설명서의 내용은 예고 없이 변경될 수 있습니다. 다른 설명이 없는 한, 용례에 사용된 회사, 기관, 제품, 도메인 이름, 전자 메일 주소, 로고, 사람, 장소 및 이벤트 등은 실제 데이터가 아닙니다. 어떠한 실제 회사, 기관, 제품, 도메인 이름, 전자 메일 주소, 로고, 사람, 장소 또는 이벤트와도 연관시킬 의도가 없으며 그렇게 유추해서도 안 됩니다. 해당 저작권법을 준수하는 것은 사용자의 책임입니다. 저작권에서의 권리와는 별도로, 이 설명서의 어떠한 부분도 Microsoft의 명시적인 서면 승인 없이는 어떠한 형식이나 수단(전기적, 기계적, 복사기에 의한 복사, 디스크 복사 또는 다른 방법) 또는 목적으로도 복제되거나, 검색 시스템에 저장 또는 도입되거나, 전송될 수 없습니다.

Microsoft가 이 설명서 본안에 관련된 특허권, 상표권, 저작권, 또는 기타 지적 재산권 등을 보유할 수도 있습니다. 서면 사용권 계약에 따라 Microsoft로부터 귀하에게 명시적으로 제공된 권리 이외에, 이 설명서의 제공은 귀하에게 이러한 특허권, 상표권, 저작권, 또는 기타 지적 재산권 등에 대한 어떠한 사용권도 허여하지 않습니다.

© 2002 Microsoft Corporation. All rights reserved.

Microsoft, Xbox 및 Xbox 로고는 미국, 대한민국 및/또는 기타 국가에서의 Microsoft Corporation 등록 상표 또는 상표입니다.

여기에 인용된 실제 회사와 제품 이름은 해당 소유자의 상표일 수 있습니다.

Microsoft Corporation, One Microsoft Way, Redmond, WA 98052-6399 USA



메모리 카드



Xbox 記憶匣

記憶匣

Xbox 記憶匣額外提供超過 500 區塊的可攜式儲存空間，可用來儲存遊戲存檔。Xbox 記憶匣是 Microsoft 的 Xbox™ 視訊遊戲系統專用配備。

重要事項！使用本產品之前，請先閱讀《Xbox 說明手冊》，以獲取安全資訊和健康方面的警告。請將《Xbox 說明手冊》與此手冊保存下來，以便將來參照之用。涵蓋此 Xbox 記憶匣的有限保固亦包含在《Xbox 說明手冊》中。

連接 Xbox 記憶匣

若要連接 Xbox 記憶匣，請將 Xbox 記憶匣插入 Xbox 控制器或其他 Xbox 周邊配備的擴充槽。若要移除，請拔出 Xbox 記憶匣。


注意：請勿用手或金屬物品碰觸 Xbox 記憶匣接頭、Xbox 控制器或周邊擴充槽。因為這樣做會造成 Xbox 記憶匣、Xbox 控制器或周邊配備的損壞。

個人化的 Xbox 記憶匣

要個人化 Xbox 記憶匣，請給它一個名稱

1. 開啟 Xbox 主機 (光碟托盤中不可有任何光碟)。
2. 選取 [記憶體]，然後選取指定的 Xbox 記憶匣。
3. 選取 [個人化]，然後輸入您想要的名稱。

一旦 Xbox 記憶匣個人化之後，Xbox 便會以新名稱來加以識別。

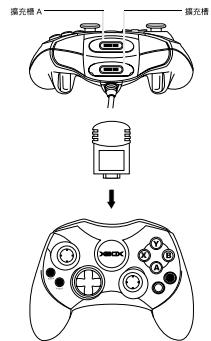



複製或刪除遊戲存檔

您可以將遊戲存檔或其他遊戲資訊儲存在 Xbox 記憶匣中。如需有關遊戲存檔的資訊，請參閱您的說明手冊。
您可以將 Xbox 記憶匣內的資訊複製到其他的 Xbox 記憶匣或 Xbox 硬碟，也可以刪除遊戲存檔，以釋放 Xbox 記憶匣上的可用記憶體區塊。

記憶匣

若要複製或刪除遊戲存檔

1. 開啟 Xbox 主機(光碟托盤中不可有任何光碟)。
2. 選取 [記憶體]，然後選取指定的 Xbox 記憶匣。
3. 選取指定的遊戲存檔。
4. 選取 [複製]，將該檔案移到另一個 Xbox 記憶匣或 Xbox 硬碟，或者選取 [刪除]，將選取的遊戲從 Xbox 記憶匣中刪除。

如需更多協助

若遇到任何問題，請勿試圖將 Xbox 記憶匣或 Xbox 主機以任何方式進行拆解、維修或者修改。以免因觸電或起火而導致嚴重的傷害或死亡，並喪失產品原本提供的保固。除非是「Xbox 客戶支援」代表指導您進行上述動作，否則請勿向零售商請求欲進行 Xbox 視訊遊戲系統或其周邊配備的維修或服務。

請參閱 <http://www.xbox.com> 或者撥打「Xbox 客戶支援」專線：

- 台灣：00801 44 4231
- 香港：800 96 4215
- 新加坡：800 448 1330



本文件中的資訊 (包括 URL 及其他 Internet 網站參照)，如有變更恕不另行通知。除非另有註明，否則本文之範例公司、組織、產品、領域名稱、電子郵件地址、商標圖樣、人員、地點及事件均為虛構，並非意指任何真實公司、組織、產品、領域、電子郵件位址、商標圖樣、人員、地點或事件。遵守所有適用的著作權法是使用者的責任。未經 Microsoft Corporation 書面許可，貴用戶不得為任何目的使用任何形式或方法 (電子形式、機械形式、影印、記錄或其他方式) 複製或傳送本文件的任何部份，也不得將本文件的任何部份重製、儲存或放入檢索系統 (retrieval system)。

Microsoft 可能擁有本文件所提及內容中所含之專利權、專利優先權、商標、著作權，或其他智慧財產權。除非 Microsoft 書面授權合約所明示規定者外，提供本文件並不授予貴用戶上述專利權、商標、著作權或其他智慧財產權。

©2002 Microsoft Corporation.保留一切權利。

Microsoft、Xbox 和 Xbox 商標圖樣係 Microsoft Corporation 在美國及/或其他國家的註冊商標或商標。

本文件中所提實際公司和產品，可能為各擁有人所有之商標。

Microsoft Corporation, One Microsoft Way, Redmond, WA 98052-6399 USA.

記憶庫

14



記憶圖



記憶匣



XBOXTM
COMPATIBLE

Microsoft[®]

0902 Part Number: X08-85967-01

